

UNISON SERIES REMOTE LAMP HEAD



6-20 WATT UNITS INSTALLATION AND OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- All servicing should be performed by qualified personnel only.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Do not let power supply cords touch hot surfaces.
- Do not mount near gas or electric heaters.


- **CAUTION:** Halogen cycle lamp(s) are used in this equipment. To avoid shattering: Do not operate lamp in excess of rated voltage, protect lamp against abrasion and scratches and against liquids when lamp is operating. Dispose of lamp with care.
- Halogen cycle lamps operate at high temperatures. Do not store or place flammable materials near lamp.
- **CAUTION:** "To avoid electrical overload, total connected lamp load (factory and field installed) should not exceed output rating."
- Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS WARNING

Shut off AC power to branch circuits to which units will be connected. All wiring should be per National Electrical Code and local regulations.

INSTRUCTIONS - INSTALLATION

These units can be ceiling or wall mounted.

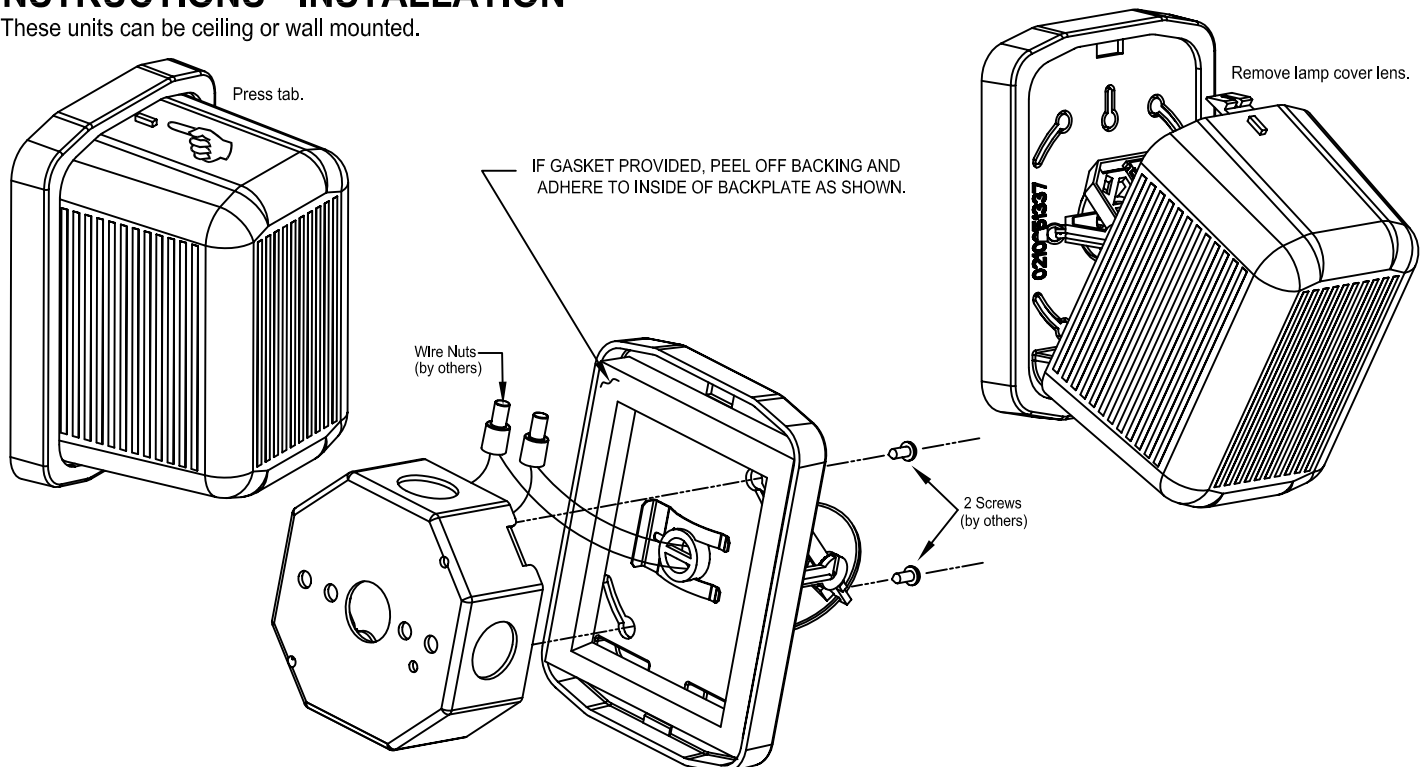

Remove appropriate knockouts in backplate. Make service connections at this time. Mount backplate to outlet box with two (2) screws supplied by other. When outlet box is not used, wire nuts may be placed into cavities in backplate. Position lamp head as desired and replace lens.